



FRONT DOOR COMPONENTS

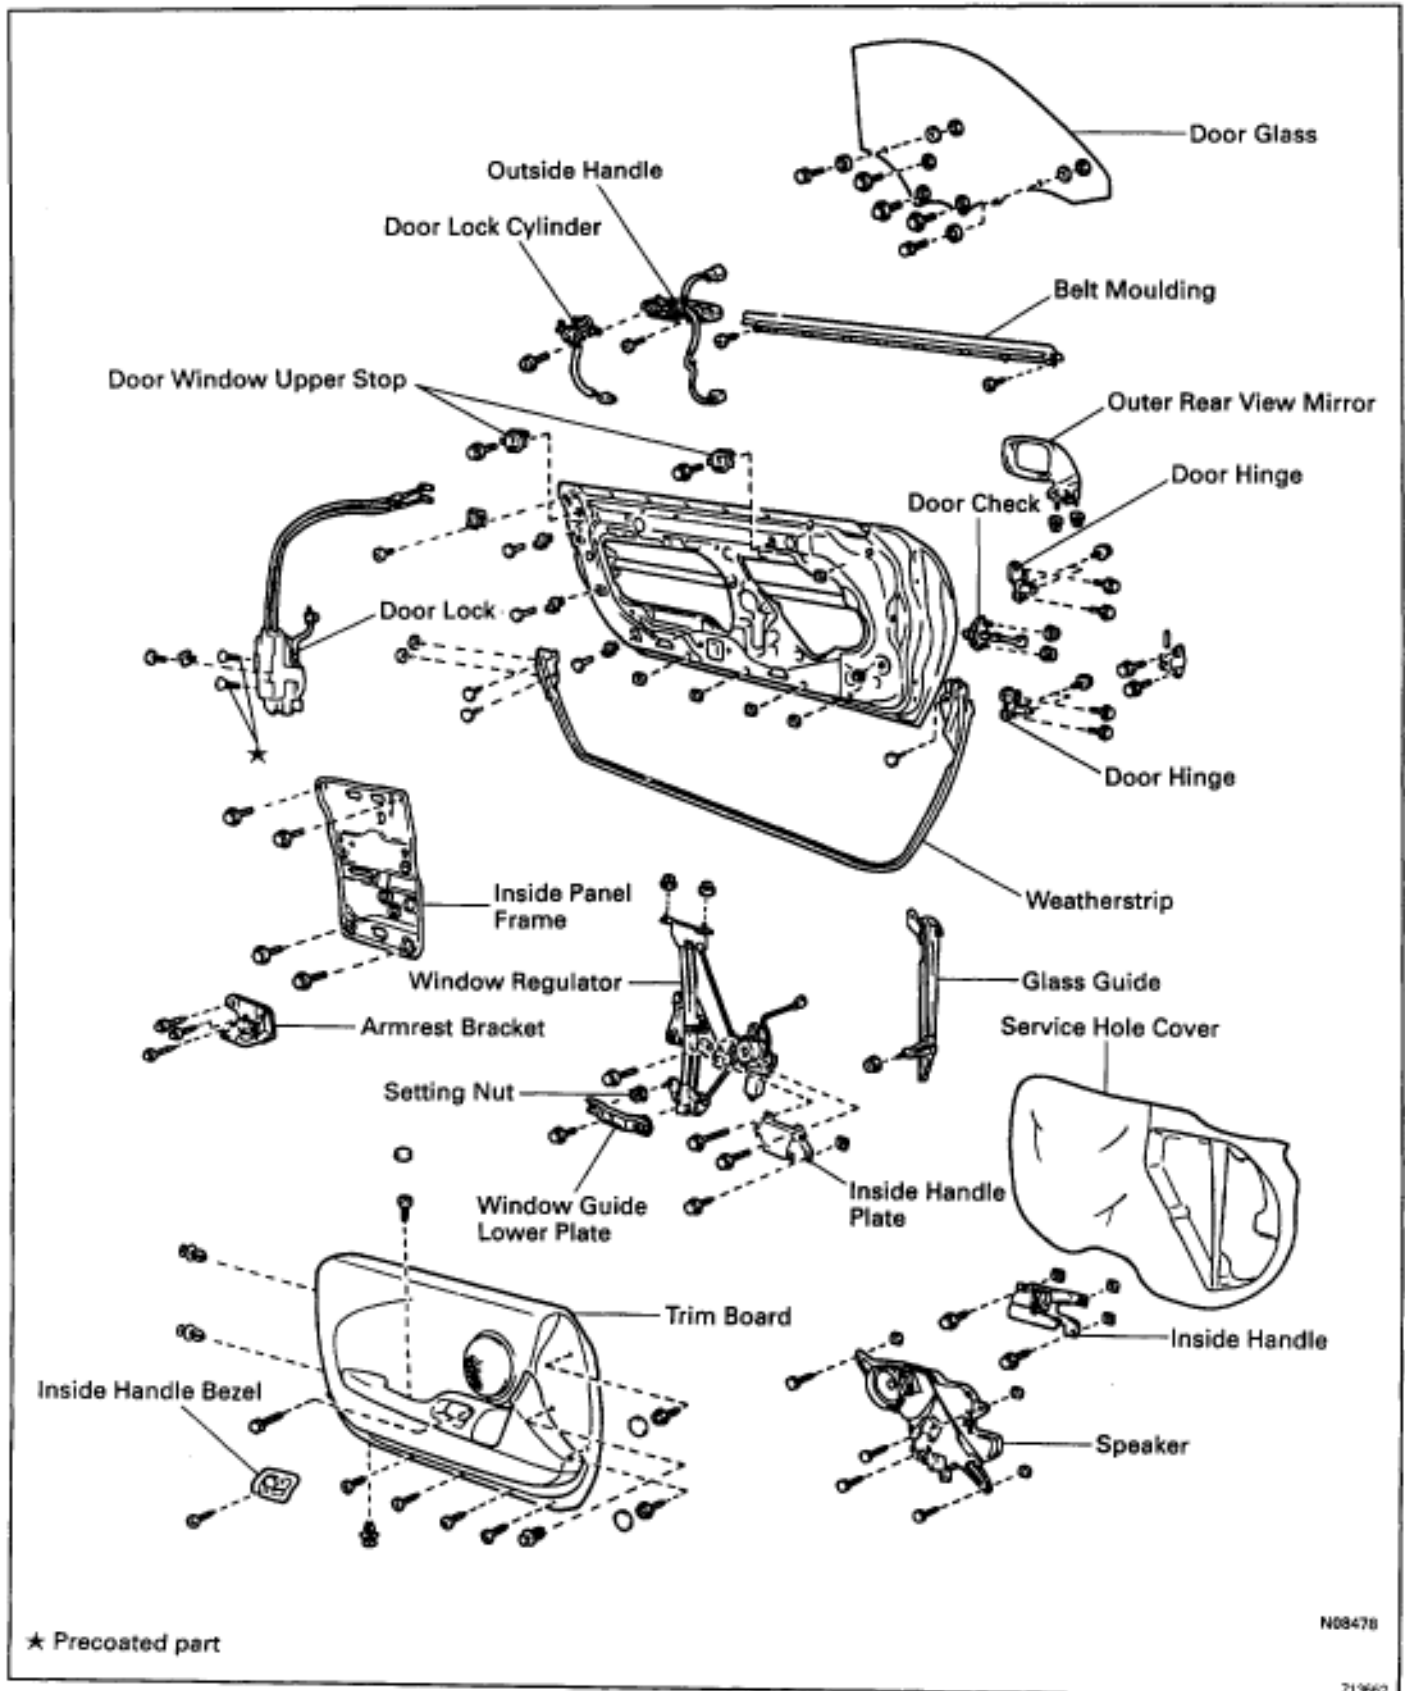

★ Precoated part

N08478

219662

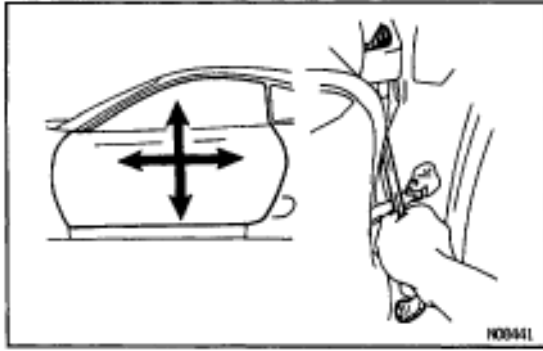


FRONT DOOR ADJUSTMENT

1. ADJUST DOOR IN FORWARD / REARWARD AND VERTICAL DIRECTIONS

Using SST, adjust the door by loosening the body side hinge bolts.

SST 09812-00020

Torque: 52 N·m (530 kgf·cm, 38 ft·lbf)

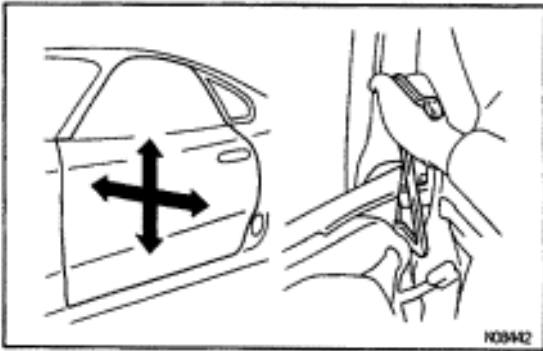


2. ADJUST DOOR IN LEFT/RIGHT AND VERTICAL DIRECTIONS

Using SST, adjust the door by loosening the door side hinge bolts.

SST 09812-00010

HINT: Substitute the standard bolt for the centering bolt. (See page [BO-10](#))

Torque: 25 N·m (260 kgf·cm, 19 ft·lbf)

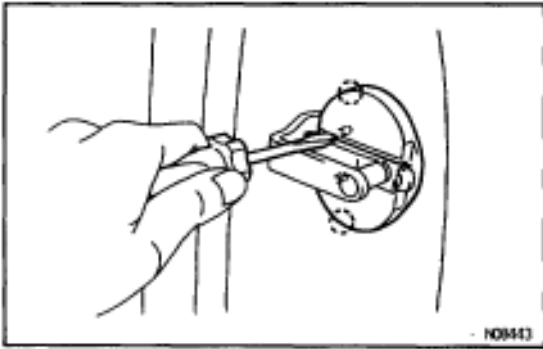


3. ADJUST DOOR LOCK STRIKER

(a) Check that the door fit and door lock linkages are adjusted correctly.

(b) Using a screwdriver, remove the striker cover.

(c) Using a torx wrench, loosen the striker mounting screws.

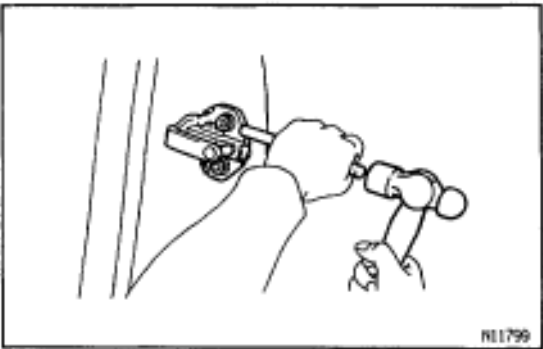

(d) Using a brass bar and hammer, tap the striker to adjust it.
CAUTION: Do not tap the striker too hard.