



BACK DOOR BACK DOOR ADJUSTMENT

1. ADJUST DOOR IN HORIZONTAL DIRECTION

- Remove the back door trim board.
- Remove the roof headlining. (See pages [BO-58](#) to 61)

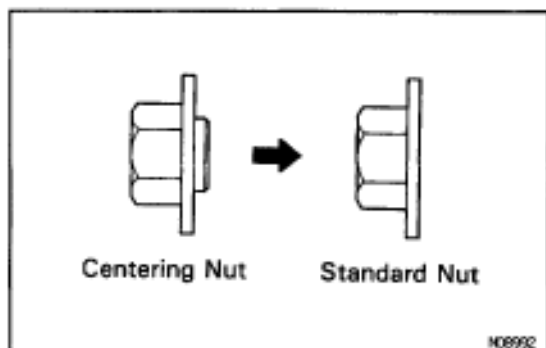

- Adjust the door by loosening the body side hinge nuts.
Torque: 21 N·m (210 kgf·cm, 15 ft·lbf)
HINT: Since the centering nut is used as the back door hinge nut, the back door cannot be adjusted with it on. Substitute the standard nut for the centering nut.
- Reinstall the removed parts in the reverse order to their removal.

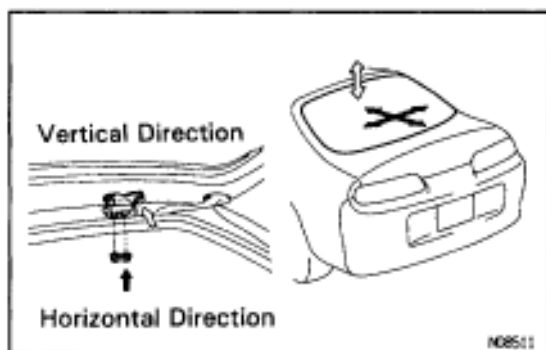


2. ADJUST DOOR IN VERTICAL DIRECTION

Adjust the door by loosening the back door side hinge bolts.


Torque: 13 N·m (130 kgf·cm, 9.4 ft·lbf)

HINT: Substitute the standard bolt for the centering bolt. (See page [BO-10](#))

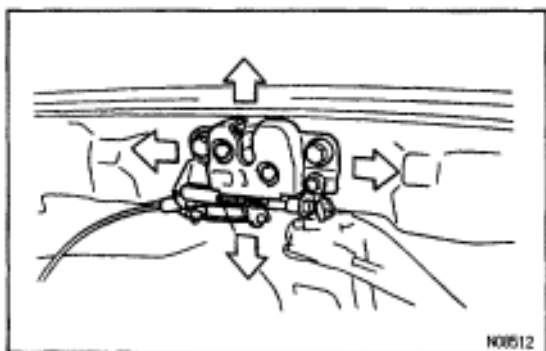

3. ADJUST DOOR LOCK

- Remove the clips and the deck trim rear cover.
- Loosen the lock mounting bolts to adjust.
Torque: 19 N·m (195 kgf·cm, 14 ft·lbf)
- Using a brass bar and hammer, tap the lock to adjust it.
CAUTION: Do not tap the lock too hard. (See page [BO-12](#))
- Install the deck trim rear cover.

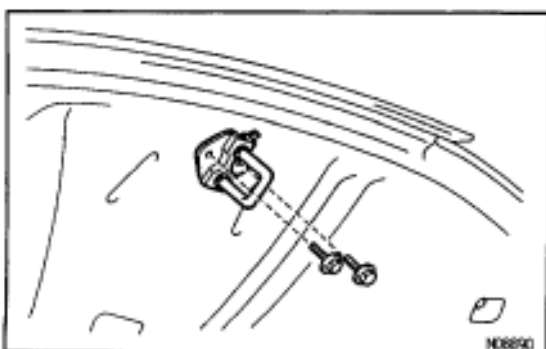

BACK DOOR LOCK STRIKER REMOVAL AND INSTALLATION

- REMOVE BACK DOOR TRIM BOARD
- REMOVE AND INSTALL STRIKER
Torque: 13 N·m (130 kgf·cm, 9.4 ft·lbf)
- INSTALL BACK DOOR TRIM BOARD