


POWER WINDOW REGULATOR DISASSEMBLE AND REASSEMBLE

1. REMOVE POWER WINDOW MOTOR


- (a) Remove 2 screws and the cover plate.

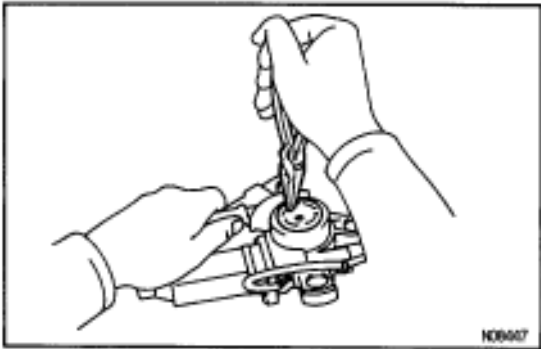

- (b) Pull out the drum while detaching the cable guide out from the motor.

HINT:

- Pull out the drum and the cable guide evenly without tilting the drum.
- Handle the window regulator carefully so that the cable does not get detached.
- Do not pry the above parts with a screwdriver.

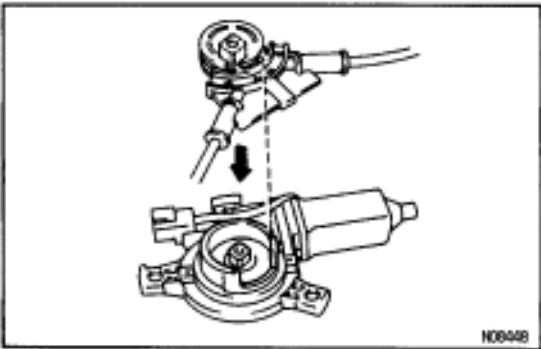

2. INSTALL POWER WINDOW MOTOR

- (a) Install the motor by fitting the shaft of the motor into the window regulator drum.

HINT:

- If the shaft does not fit properly into the drum, slowly move the window glass bracket by hand to turn the drum.
- While turning the drum, make sure that it does not detach away from the cable guide.

- (b) Install the cover plate.

HINT: Attach the cover plate firmly onto the motor to eliminate any looseness.

FRONT DOOR ASSEMBLY

Assembly is in the reverse order of disassembly.

FRONT DOOR GLASS ADJUSTMENT

1. CHECK FRONT DOOR GLASS

Check the following items. If the conditions are not met, readjust the glass.

- (a) When you close the door with the glass fully closed, the A-A, B-B sections are in the same condition as shown in the illustration.