
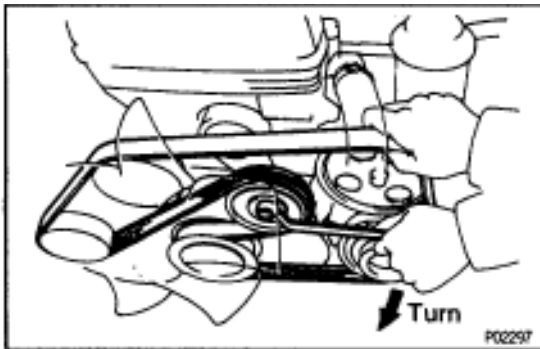


COMPRESSOR REMOVAL

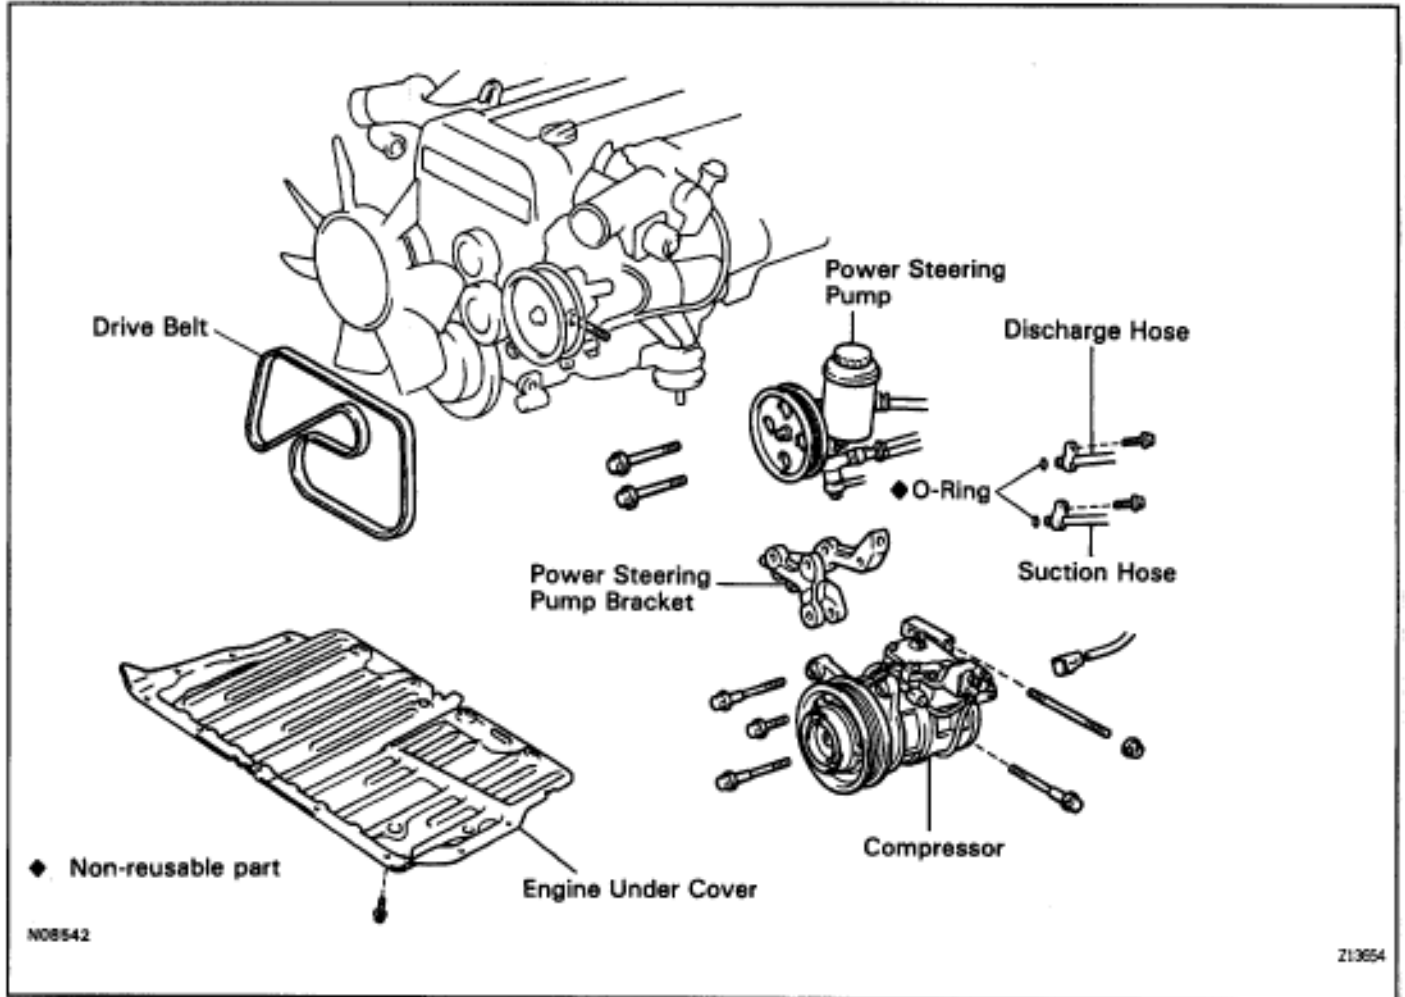

1. **RUN ENGINE AT IDLE SPEED WITH A/C ON FOR APPROX. 10 MINUTES**
2. **STOP ENGINE**
3. **REMOVE BATTERY**
4. **DISCHARGE REFRIGERANT IN REFRIGERATION SYSTEM**
5. **REMOVE DRIVE BELT**
Loosen the drive belt tension by turning the drive belt tensioner clockwise, and remove the drive belt.
6. **REMOVE POWER STEERING PUMP**
7. **DISCONNECT DISCHARGE HOSE AND SUCTION HOSE FROM COMPRESSOR**
NOTICE: Cap the open fittings immediately to keep moisture out of the system.
8. **REMOVE COMPRESSOR**
 - (a) Disconnect connector from compressor.
 - (b) Remove engine under cover.
 - (d) Remove the 4 bolts, nut and stud bolt.
 - (d) Remove the compressor.