



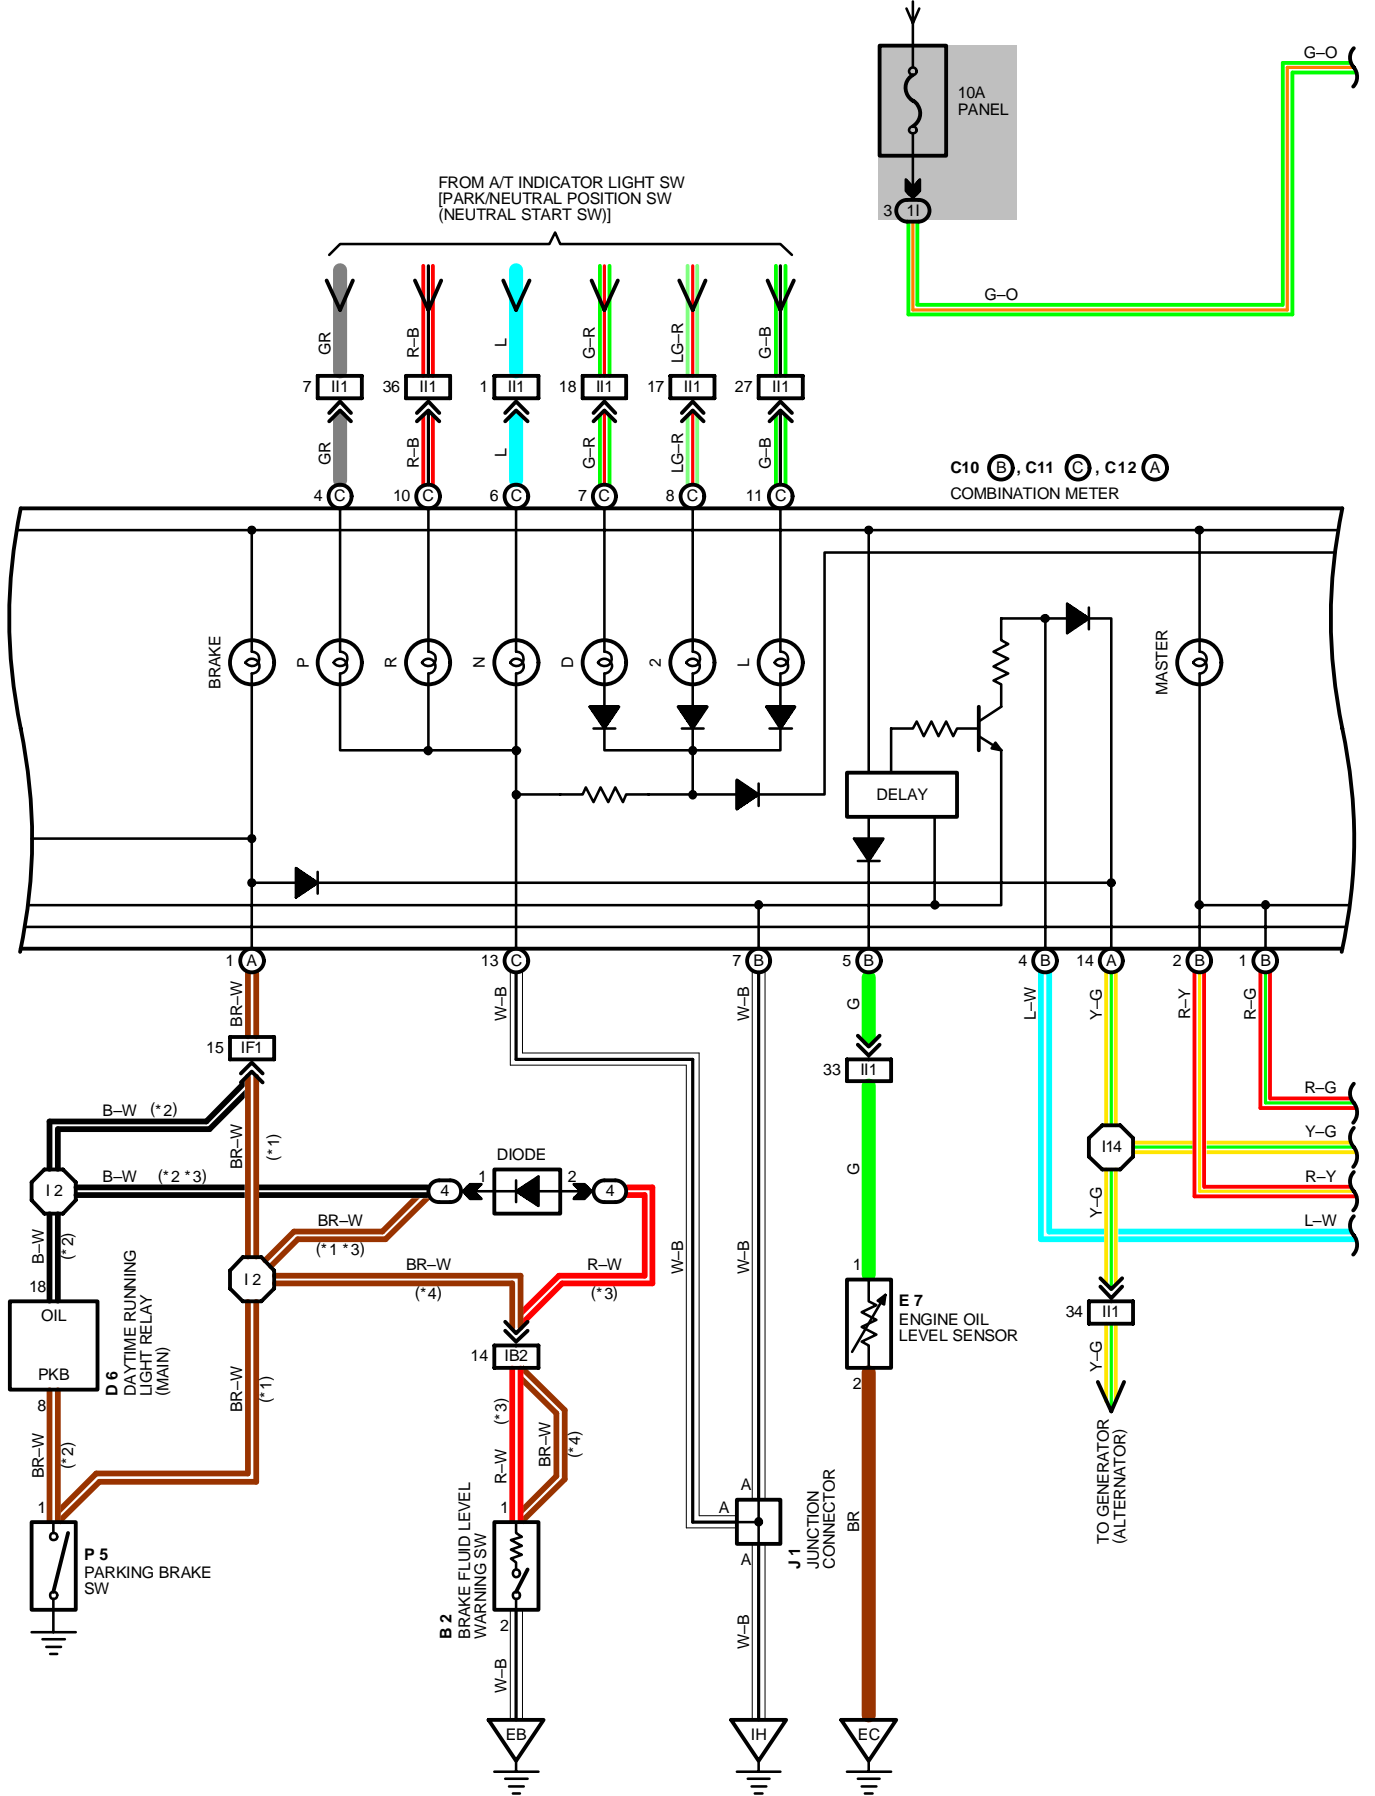


FROM POWER SOURCE SYSTEM (SEE PAGE 56)

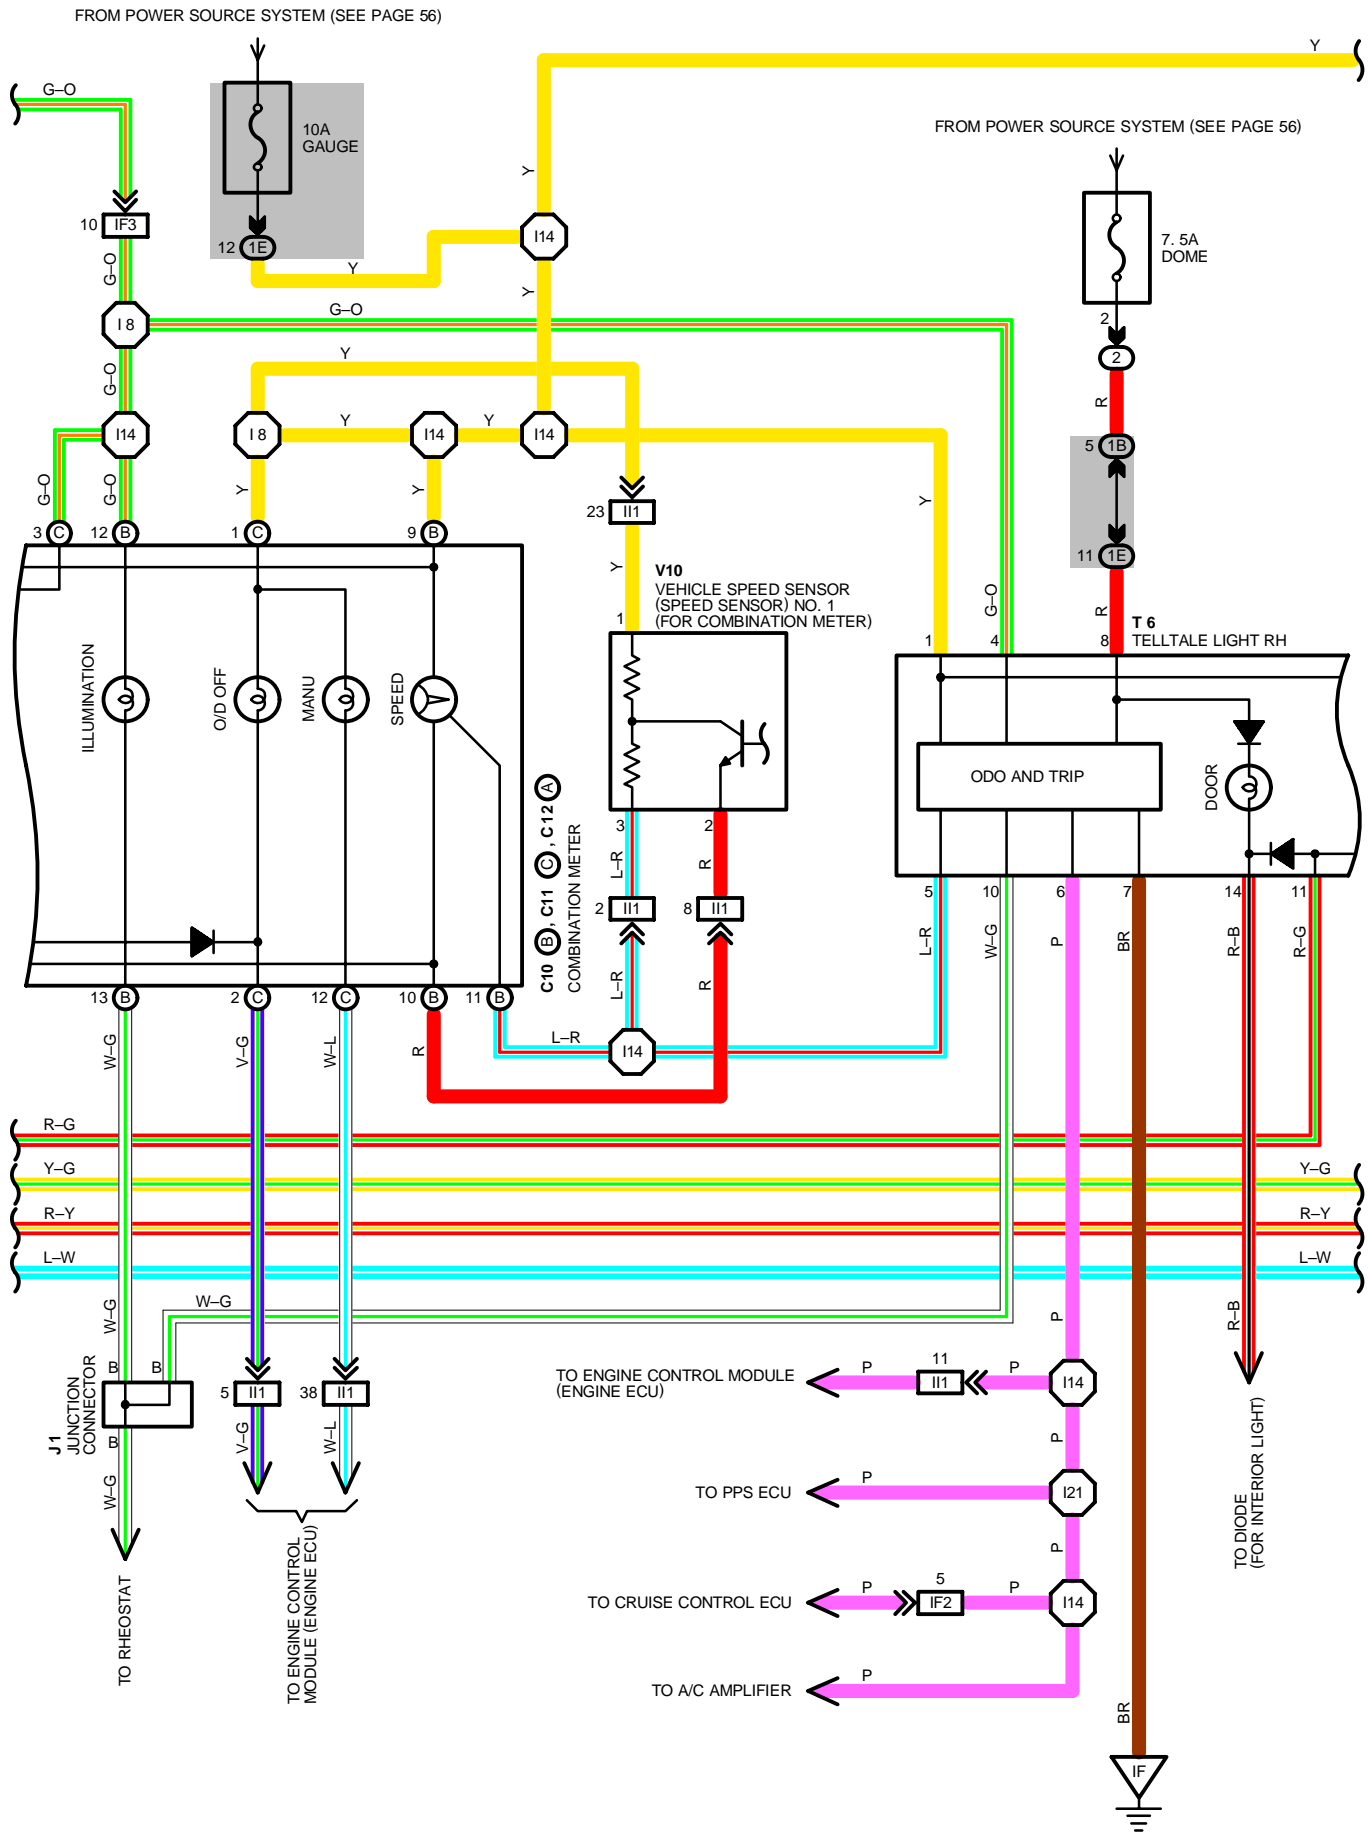

# COMBINATION METER



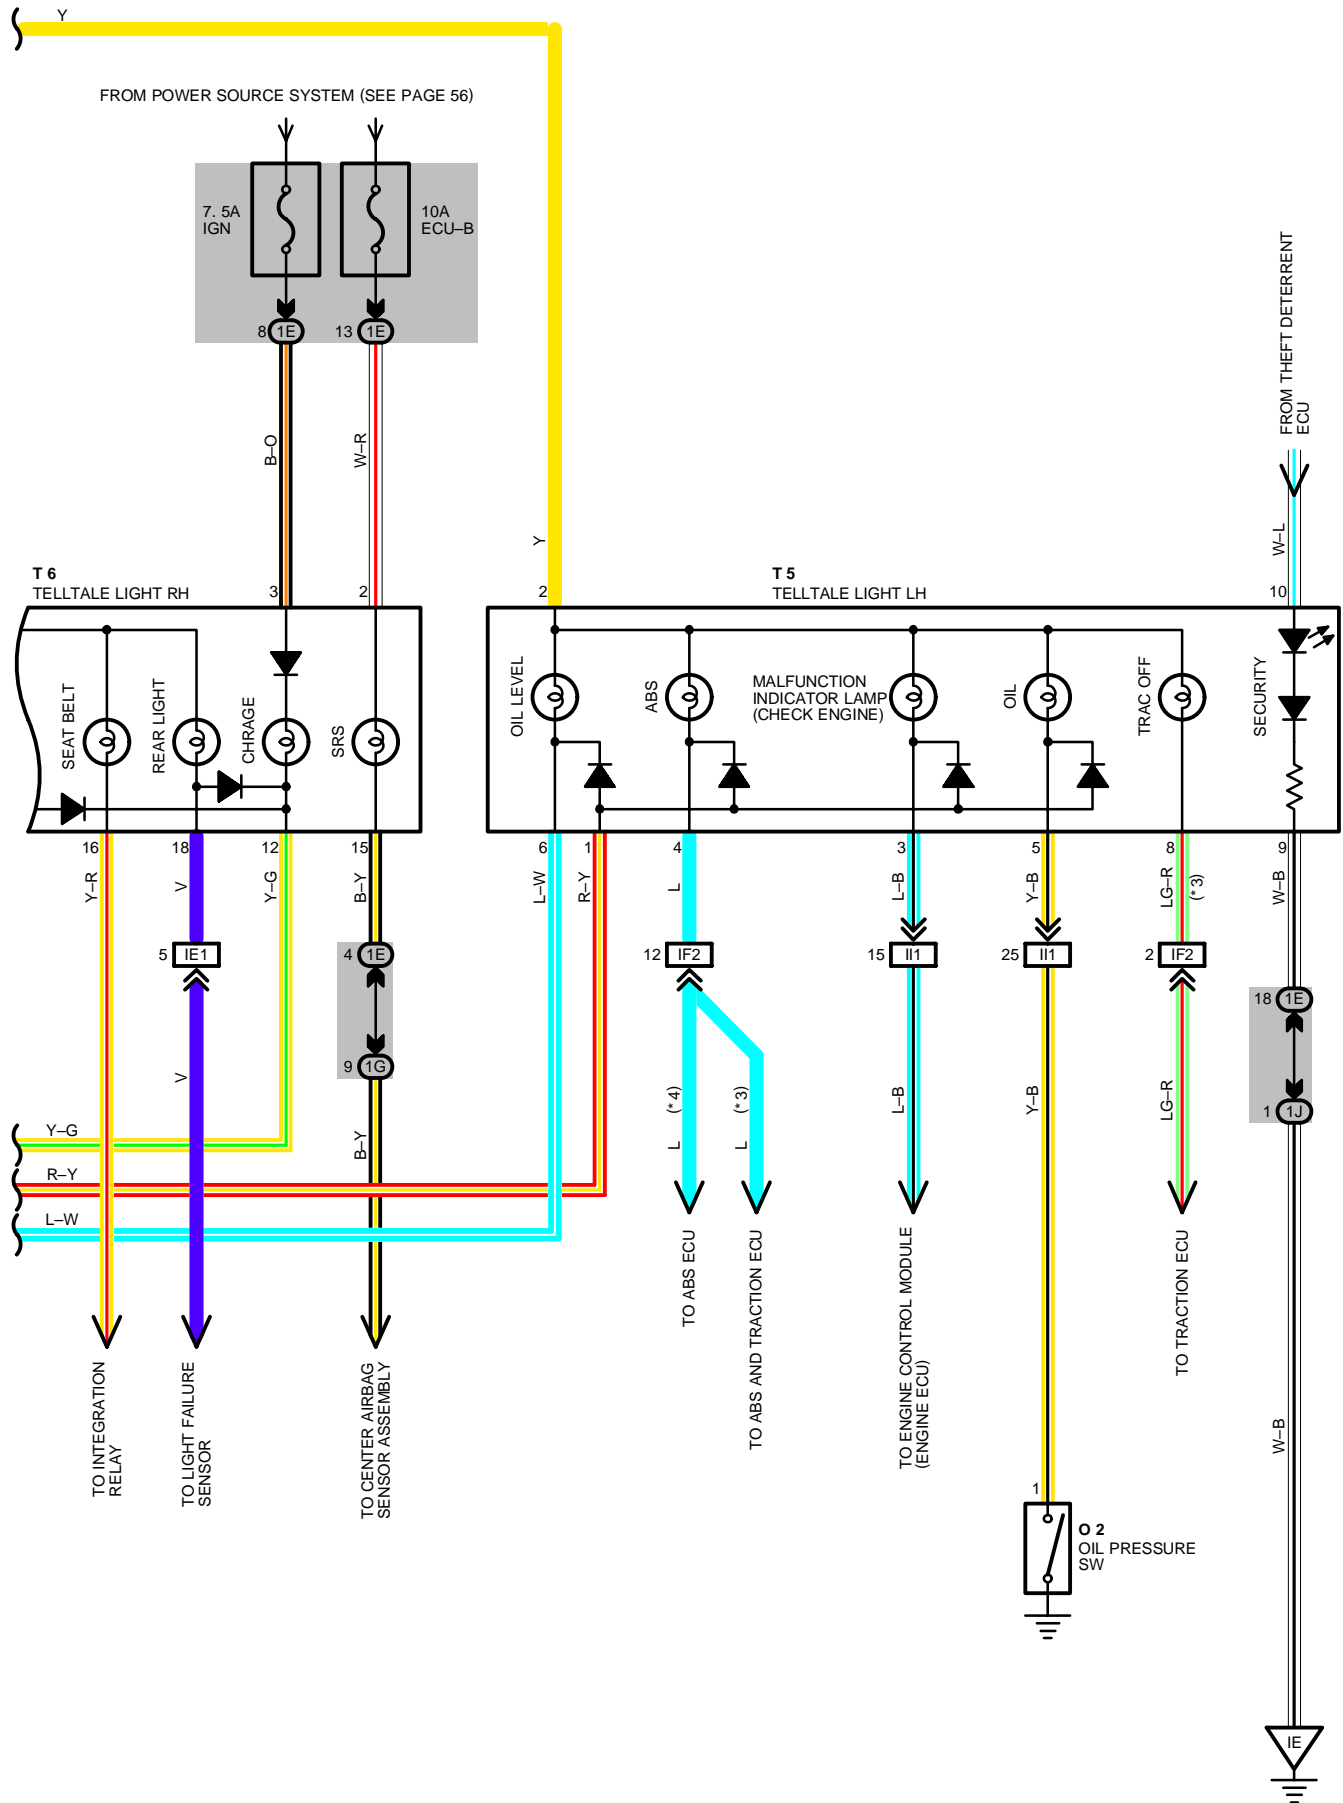

# COMBINATION METER

## SERVICE HINTS

### B 2 BRAKE FLUID LEVEL WARNING SW

1-2 : CLOSED WITH FLOAT DOWN

### P 5 PARKING BRAKE SW

1-GROUND : CLOSED WITH PARKING BRAKE LEVER PULLED UP

### O 2 OIL PRESSURE SW

1-GROUND : CLOSED WITH OIL PRESSURE ABOVE APPROX. 20 KPA (2.8 PSI, 0.2 KG/CM<sup>2</sup>)

### E 4 ENGINE COOLANT TEMP. SENDER (WATER TEMP. SENDER)

1-GROUND : APPROX. 160-240 (50°C, 122°F)  
: APPROX. 17.1-20.4 (120°C, 288°F)

### E 7 ENGINE OIL LEVEL SENSOR

1-2 : CLOSED WITH FLOAT UP AND ENGINE OIL TEMP. AT BELOW APPROX. 55°C (131°F)  
OPEN WITH FLOAT DOWN AND ENGINE OIL TEMP. AT BELOW APPROX. 60°C (140°F)

### F14 FUEL SENDER

1-2 : APPROX. 3 AT FUEL FULL  
: APPROX. 110 AT FUEL EMPTY

### C10(B), C12(A) COMBINATION METER

(B) 9-GROUND : APPROX. 12 VOLTS WITH IGNITION SW AT ON POSITION

(A)16-GROUND : APPROX. 12 VOLTS WITH IGNITION SW AT ST POSITION AND SHIFT LEVER AT P OR N POSITION (A/T)  
12 VOLTS WITH IGNITION SW AT ST POSITION AND CLUTCH PEDAL DEPRESSED (M/T)

(A) 8-GROUND : ALWAYS CONTINUOUS

(A)11-GROUND : ALWAYS CONTINUOUS

(A) 2-GROUND : ALWAYS APPROX. 12 VOLTS

## ○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE	
B 2	24 (2JZ-GTE)	E 4	26 (2JZ-GE)	O 2	27 (2JZ-GE)	
	26 (2JZ-GE)		24 (2JZ-GTE)		25 (2JZ-GTE)	
C 9	28	E 7	26 (2JZ-GE)	P 2	27 (2JZ-GE)	
			C10 B		28	P 5
C11	C	28	F14	30	T 5	29
C12	A	28	I 4	27	T 6	29
D 6	28	J 1	29	V10	25 (2JZ-GTE)	
E 4	24 (2JZ-GTE)	O 2	25 (2JZ-GE)		27 (2JZ-GE)	

## ○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	22	R/B NO. 2 (ENGINE COMPARTMENT LEFT)
4	23	R/B NO. 4 (LEFT KICK PANEL)

## ○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1B	20	ENGINE ROOM MAIN WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1E	20	INSTRUMENT PANEL WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1G	20	COWL WIRE AND J/B NO. 1 (LEFT KICK PANEL)
1H		
1I		
1J		
1K		

## □ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IB1	36	ENGINE ROOM MAIN WIRE AND COWL WIRE (LEFT KICK PANEL)
IB2		
IE1	36	INSTRUMENT PANEL WIRE AND FLOOR NO. 2 WIRE (LEFT KICK PANEL)
IF1	36	INSTRUMENT PANEL WIRE AND COWL WIRE (INSTRUMENT PANEL REINFORCEMENT LH)
IF2		
IF3	36	INSTRUMENT PANEL WIRE AND COWL WIRE (RIGHT KICK PANEL)
II1	38	ENGINE WIRE AND INSTRUMENT PANEL WIRE (RIGHT KICK PANEL)
IJ2	38	ENGINE WIRE AND COWL WIRE (RIGHT KICK PANEL)
BP1	40	FUEL GAUGE WIRE AND FLOOR NO. 2 WIRE (LUGGAGE ROOM FRONT LH)

**▽ : GROUND POINTS**

CODE	SEE PAGE	GROUND POINTS LOCATION
<b>EB</b>	32 (2JZ-GTE)	FRONT SIDE OF LEFT FENDER
	34 (2JZ-GE)	
<b>EC</b>	32 (2JZ-GTE)	FRONT SIDE OF INTAKE MANIFOLD
	34 (2JZ-GE)	
<b>IE</b>	36	LEFT KICK PANEL
<b>IF</b>		
<b>IH</b>	36	RIGHT KICK PANEL

 
**○ : SPLICE POINTS**

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
<b>I2</b>	38	COWL WIRE	<b>I14</b>	38	INSTRUMENT PANEL WIRE
<b>I3</b>		INSTRUMENT PANEL WIRE	<b>I21</b>		
<b>I8</b>					


**B 2 GRAY**




**C 9**




**C10 (B) BLUE**

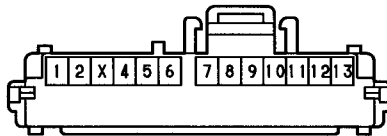


**C11 (C) BROWN**

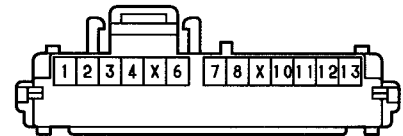


**(2JZ-GTE) C12 (A)**

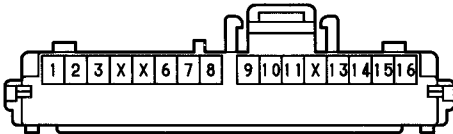

**(2JZ-GE) C12 (A)**

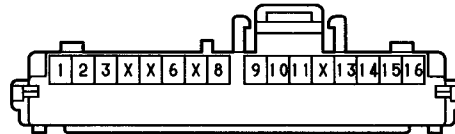

**D 6 GRAY**

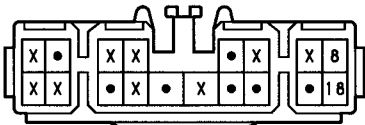


**E 4 GRAY**




**E 7 GRAY**




**E10 DARK GRAY**

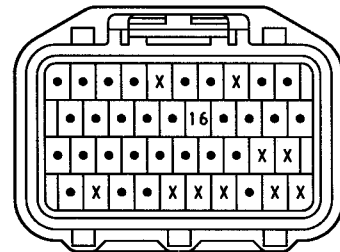


**F14 DARK GRAY**

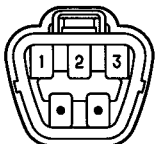

**I 4 BLACK**

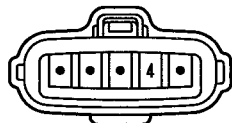


**J 1**

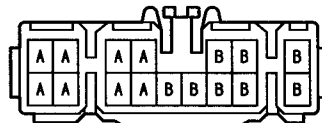

(HINT:SEE PAGE 7)


**O 2 BLACK**

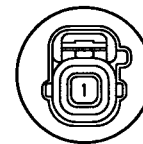

# COMBINATION METER

---

P 2 GRAY

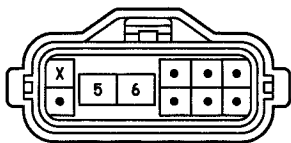

P 5




(2JZ-GTE) T 5



(2JZ-GE) T 5



T 6

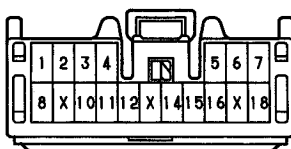

V10 BLACK

